


Installation & Maintenance



PPE


Pack Contents

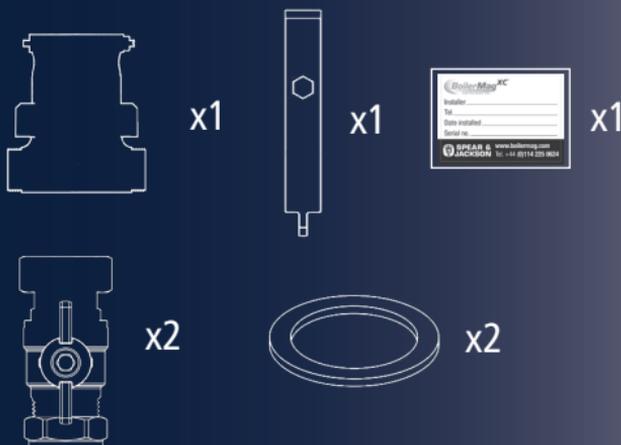


Register Your Warranty at
boilermag.com/register-warranty

Tel: +44 (0)114 225 0624

Where To Install BoilerMag XC

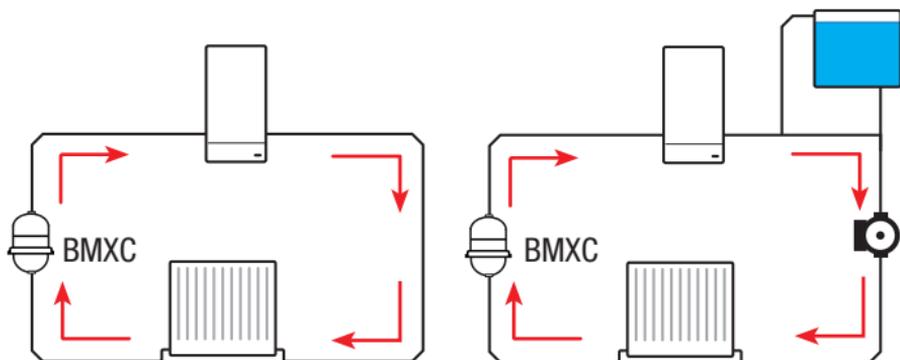


Installation - Always ensure the air vent points upwards

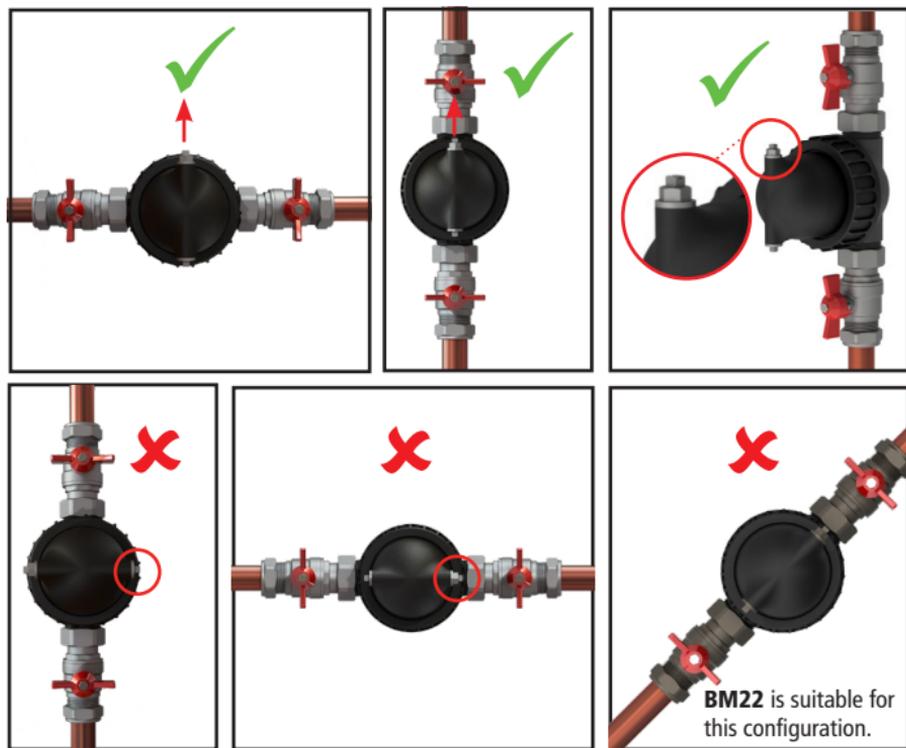

Installing BoilerMag XC

- 1** Cut designated pipe section (see table below)


Model/Valve Type	(a)
BMXC22	203mm
BMXC 3/4" BSP	225mm
BMXC 3/4"	200mm
BMXC 1"	225mm

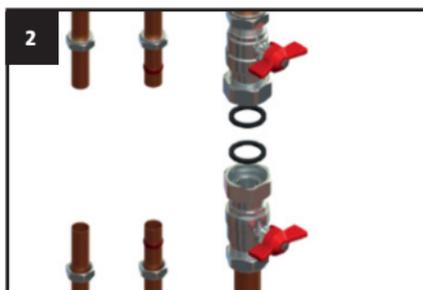

Attach isolation valves to pipework.



Insert the valve seals and fit the filter unit into place, tighten the nuts on the isolation valves. Ensure that the filter collar is tightened. Ensure the air vent and drain valve are closed.

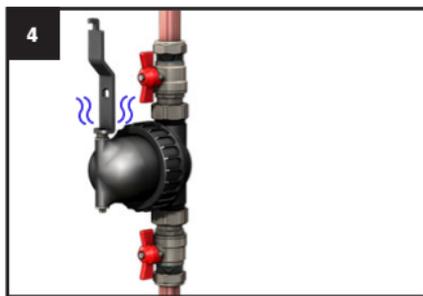


Open isolation valves. Vent out any air through the air vent then re-close using the multi tool provided.



Close both isolation valves, open the air vent, then open the drain valve and drain the unit.




Re-insert drain valve, unscrew locking collar and remove the filter bowl and core.

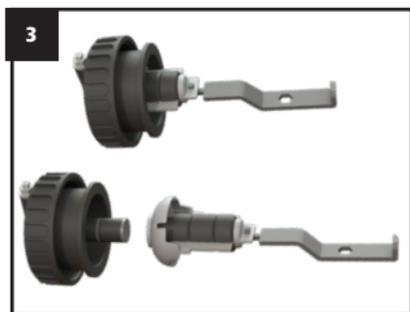

Remove the core cover with tool provided.




Remove any sludge or magnetite.

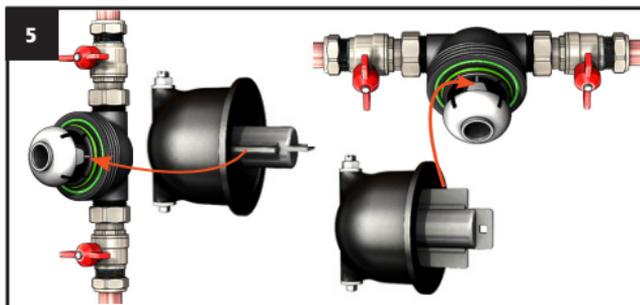

Insert core cover into port block, ensure fins are horizontal when pipe vertical and vertical when pipe is horizontal.

(Continued Overleaf)

6

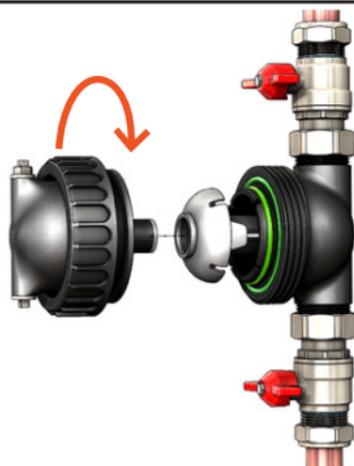

Locate the filter bowl and core into place by tightening the locking collar, making sure the air vent is positioned at the top.

7



Turn valves to the on position.

8



Vent to release air then re-close.

BoilerMag^{XC}

Dual Flow System Filter



Visit boilermag.com or Phone: +44 (0)114 225 0624

Also Available



BM1



BM3



**Electrolytic Scale
Reducer**



Register Your Warranty at
boilermag.com/register-warranty